
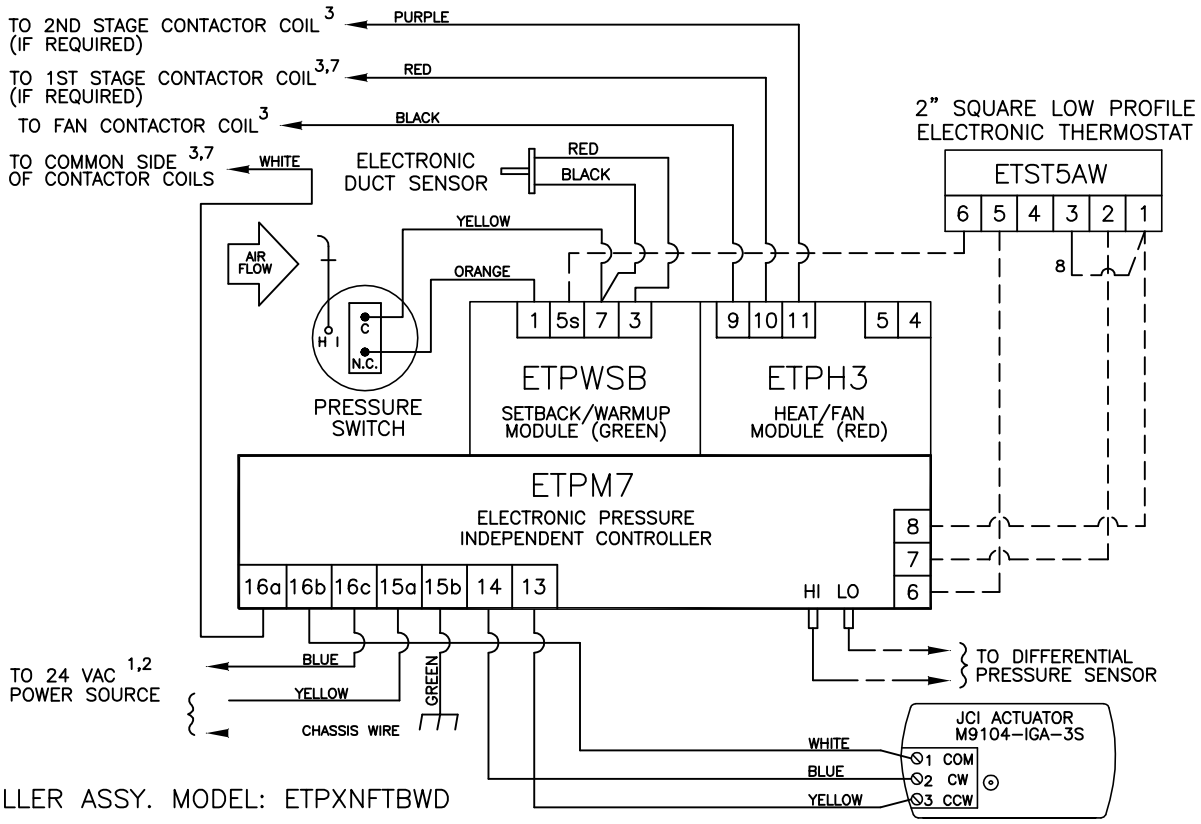


This application provides intermittent fan powered variable air volume control with up to two stages of electric or hot water heat, night setback and morning warm up. As space temperature drops, primary airflow is reset from maximum to minimum setpoint. As space temperature continues to drop, the unit fan is energized thus supplying plenum air to the space. On a further drop in space temperature, heat is energized in stages to satisfy the load. When system air is failed, the unit automatically switches into the night setback mode. The primary air valve remains closed and the unit fan and heat are cycled to maintain the night offset. When warm air is sensed by an electronic duct sensor, the unit fan and heat are deenergized and the primary air valve opens to the maximum airflow setpoint for morning warm up. Air volume limits are located at the thermostat.

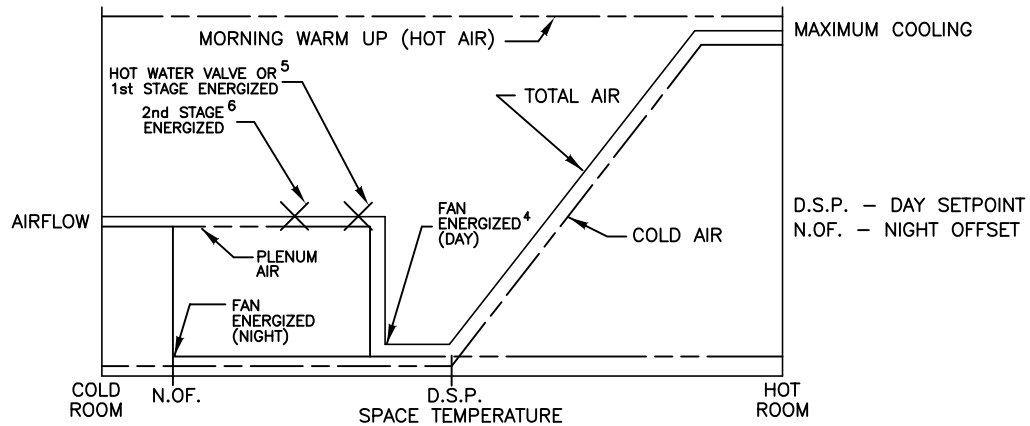

CONTROLLER ASSY. MODEL: ETPXNFTBWD

- 1 MINIMUM 40 VA
- 2 IF ELECTRIC HEAT IS PROVIDED, TRANSFORMER AND FAN RELAY ARE LOCATED IN HEATER ENCLOSURE—REFER TO HEATER WIRING DIAGRAM. OTHERWISE, REFER TO FAN WIRING DIAGRAM FOR TRANSFORMER AND RELAY WIRING, AND OTHER HIGH VOLTAGE WIRING.
- 3 MAXIMUM 10 VA HOLDING COIL
- 4 ENERGIZED 1° F BELOW SETPOINT
- 5 ENERGIZED 2° F BELOW SETPOINT
- 6 ENERGIZED 3° F BELOW SETPOINT
- 7 IF HOT WATER HEAT IS USED, FIELD WIRING IS REQUIRED.
- 8 WIRE TERMINAL 3 TO TERMINAL 1 IN THE FIELD

--- FACTORY TUBING
 - - - FIELD WIRING
 ——— FACTORY WIRING

ENVIRO-TEC BY JOHNSON CONTROLS		DRAWING NO. 19338
DRN BY: AWW DATE: 05/22/97 SCALE: N/A	DATE: 04/09/08 REV: 07	
TITLE: FV7401 PRESSURE INDEPENDENT ELECTRONIC CONTROLS		
THIS DRAWING CONTAINS PROPRIETARY DATA. UNAUTHORIZED DISCLOSURE, REPRODUCTION, OR USE IS STRICTLY PROHIBITED WITHOUT WRITTEN PERMISSION.		
DO NOT SCALE DRAWING. DIMENSIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE. CONTACT FACTORY FOR CERTIFIED DRAWINGS.		